



cubo

Model: AU-1300

Frequently Asked Questions

1. How do I set the alarm?

Press and hold **ALARM 1** or **ALARM 2** till the time blinks. Set the hour with **VOLUME +/-**, set the minutes by pressing **FORWARD** (right arrow) and set with **VOLUME +/-**. Confirm by pressing **ALARM 1** or **ALARM 2**. Now set the alarm source by pressing **MODE**. Confirm by pressing **ALARM 1** or **ALARM 2**. Choose alarm volume. Confirm once again by pressing **ALARM 1** or **ALARM 2**.

2. How do I pre-set my favourite radio station?

Search your desired station. Press and hold one of the six favourite radio station buttons above the speaker until a short beeping sound is heard.

3. The time and settings were not stored after a power cut.

- Please make sure that the red tag of the battery (back of device) is removed.
- Change the battery (back of device).

4. How can an MP3 player/ laptop/iPod or computer be connected to the device?

- Use a 3.5mm jack. With the AUX-IN connection at the back of your device connect your MP3 player/laptop/iPod or computer.
- Note: The cubo does not charge an external media player through the AUX-IN.

5. Can I wake up to my MP3 player (connection through the AUX-IN)?

Generally yes, however it is not recommended. It needs to be made certain that the MP3 player remains on till the wake up time. The risk is too big that the battery of the MP3 player will run out before the wake up time or that due to a technical setting the device turns itself off.

6. How can I modify the brightness of the display?

Press **MENU**. Press **FORWARD** or **BACKWARD** till **DISPLAY** comes up. Confirm by pressing **MENU**. With **VOLUME +/-** choose High, Low or Off.

7. A mini CD has been inserted into the device.

The product manual clearly states that mini-CDs are not compatible with the device. Unfortunately in this case, the warranty will not be fulfilled. Please ask for a repair possibility by the [sonoro Service Centre](#).

8. The CD is stuck in the CD insert.

Turn the device off and unplug it. Plug back in and press **OPEN**.

9. What is the difference between the cubo models AU-1300 and AU-1310?

The cubo model AU-1310 is the evolution of the AU-1300. cubo AU-1310 (for its launch also known as 'cubo 2010') has all the cubo AU-1300 functions as well as a radio frequency remote control, a Line-Out connection, radio station display and a connection option for the iPod® docking station eDock.

10. How can I see which model type my sonoro is?

At the back of every sonoro device, there is a 'Product N°'. This shows the model.

11. Which sonoro products are compatible with the Apple iPod products?

The product cubo (AU-1310) and elements W are compatible through the use of the optional iPod docking station eDock from sonoro. The design music system eklipse is compatible through its integrated docking station at the top of the device.

12. What does the small key lock symbol mean at the back of my sonoro?

The small key lock symbol shows the connection for a key lock cable. This is to ensure the security of sonoro products in hotels and other public areas.

13. Where can I find a sonoro dealer in my area?

Please go to www.sonoro-audio.com. At the top or the right side navigation bars click on 'Shops.' Find your area using the dealer locator fields.

14. Who can I contact when I have technical question or issue regards to my sonoro product?

Please contact the sonoro Service Centre. On our homepage click on 'Contact' found the top right navigation bar. Fill out the online contact form or call or e-mail the sonoro Service Centre directly.